

# Automatic Shaker Maintenance



For a colorful world!

**SANTINT**<sup>™</sup>

<b>Time Type</b>	<b>Daily Maintenance</b>	<b>Three Monthly Maintenance</b>	<b>Half Year Maintenance</b>	<b>Annually Maintenance</b>	<b>Triennial Maintenance</b>
<b>Automatic Shaker (SHH-IV, S5, MS)</b>	<b>Every time after shaking if colorant splash ,the clamping plate, loading plate and two side screws should be clean</b>	<b>Lubricate the side screws every three months</b>	<b>Lubricate leading pole &amp; sleeve after using half year</b>	<b>When the machine shaking , notice whether has abnormal sounds</b>	<b>Grease the main bearing with lithium complex grease after three years use grease gun</b>

---

## Content

<b>Part One</b>	
<b>Daily Maintenance</b> .....	4
<b>Part Two</b>	
<b>Three Monthly Maintenance</b> .....	5
<b>Part Three</b>	
<b>Half Year Maintenance</b> .....	6
<b>Part Four</b>	
<b>Annually Maintenance</b> .....	7
<b>Part Five</b>	
<b>Annually Maintenance</b> .....	8

## Part One

### Daily Maintenance



**Every time after shaking if colorant splash ,the clamping plate, loading plate and two side screws should be clean**

---

## Part Two

### Three Monthly Maintenance



**Lubricate the side screws every three months**

---

## Part Three

### Half Year Maintenance




Lubricate leading pole & sleeve after using half year

---

## Part Four

### Annually Maintenance

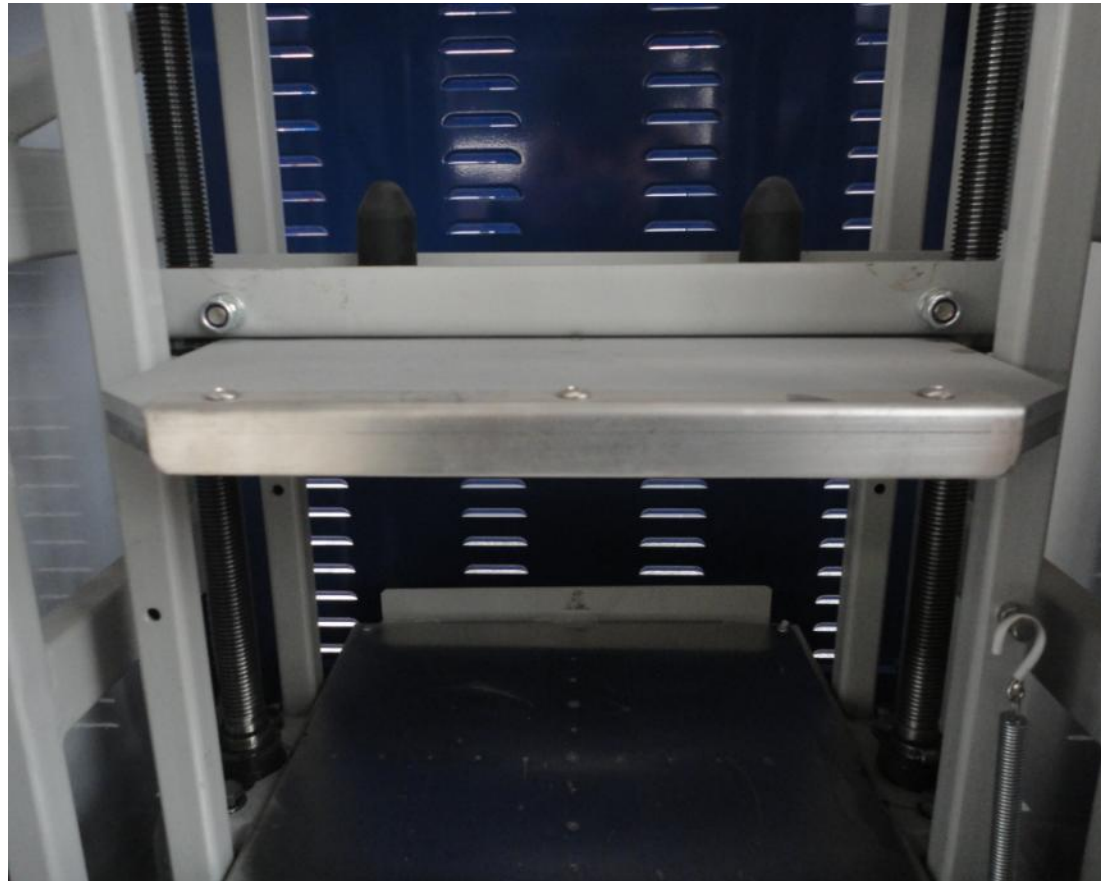

**When the machine shaking , notice whether has abnormal sounds**

## Part Five

### Triennial Maintenance

Grease the main bearing with lithium complex grease after three years use grease gun

