# The Maintenance Manual of AM200



调色设备 专业制造

#### Content

1. Daily maintenance

2. Regular maintenance




#### 1. Daily maintenance : The software will warn

the customer adding the colorant which is lower than 0.5L if the capacity of the colorant less than the minimum value, it will influence the accuracy. 2.5Lcan: the colorant capacity should not less than 0.4L 6Lcan: the colorant capacity should not less than 1L After adding the colorants, please put on the cover.





#### 2.cleaning the humidor every week .

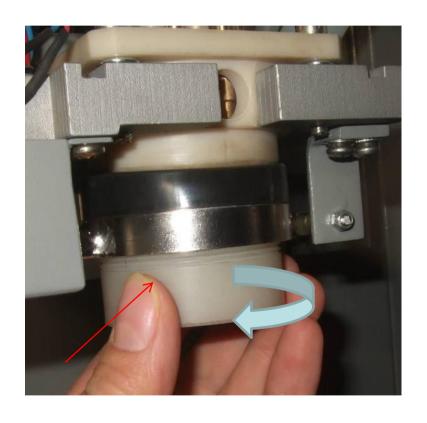

- Turn the humidor clockwise rotation
  Take out the humidor to be cleaned
- 3. Clean up the colorant inside the humidor.

with water.


4. Fill the humidor with some water, but not too much, then fix the humidor well.

3. The colorant outpours with obliquity and difficultly



**Nozzle components** 

4 .The machine equipped with the *procedure which* can backflow automatically for a fixed time in case of colorant *deposit*. If reuses the machine for long time without being connected to the power supply ,please backflow and stir every canister first.

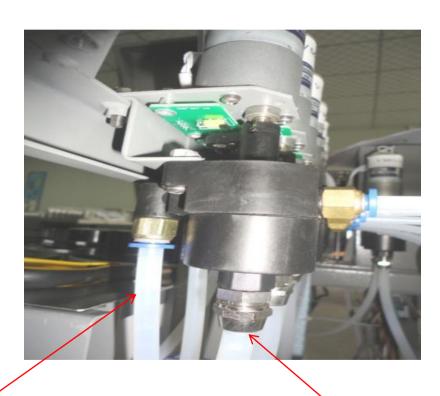

5.If the customer does use the machine for three days, the customer should outpour 0.3ml colorants to ensure the colorant has some viscosity. if the customer does outpour the colorant for long time, the nozzle may be hard and dry. the customer should outpour some colorants to ensure the nozzle moist. you can click certain canister to clean the nozzle. You can also press the key 【Ctrl】 and 【Shift】 to select many canisters to clean the nozzle. If you select many canisters, they will become black color.




### 2.Regular maintenance

The customer should do the maintenance every one to six months according to your service condition


1 .The customer should have a check the mixing motor in the process of stirring, whether the motor can work normally.




## 2. The customer should have a inspection on the water box to ensure the box full of water.

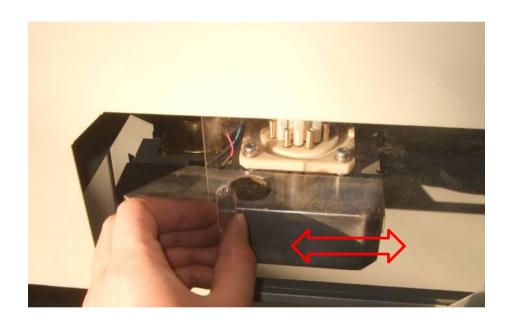

4 .The customer should have a check on the connector of the *plastic pipe to ensure a good air impermeability* every three months.

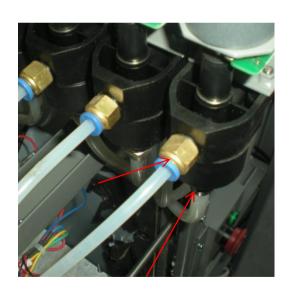



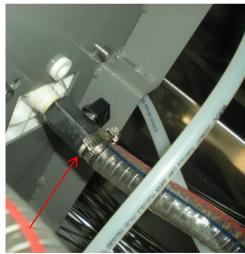

## 5. Lubricant the driven pump component every six months



#### Zhengzhou Sanhua Technology & Industry Co., Ltd

Xu shui Industrial & Trading Park Zhong yuan West Road, Zhengzhou China, 450042

**7£**£: 0371-67857219 8008836987

Thank you !